




# Concentric positioning and clamping elements

with variable range of clamping hydraulically and mechanically operated, double acting, max. operating pressure 500 bar

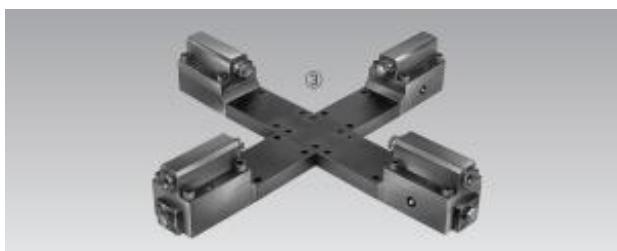

## 1 Description of the product

### Description

Concentric positioning and clamping with two or three-jaw chucks on stationary fixtures is nothing new. In many applications, however, it is not possible to place the relatively large chuck bodies on the fixture. Often the smaller clamping strokes are an additional obstacle.

In our development, the individual parts can be connected to a two or multiple-element version. In the multiple-element version always two bolts concentrically clamp - independently of the other.

The opening is determined by means of a connecting bar. The clamping strokes of the several sizes are designed such that manual or automatic loading and unloading can be effected also to clamp blanks with large tolerances. Also single-acting elements are available on request.

## 2 Validity of the documentation

This document applies to the following products:

Concentric positioning and clamping elements as per data sheet H4.300. The following types or part numbers are concerned:

## Table of contents

<b>1</b>	<b>Description of the product</b>	<b>1</b>	<b>Hydraulic element, right-hand</b>
<b>2</b>	<b>Validity of the documentation</b>	<b>1</b>	• 4311 221, 222, 223
<b>3</b>	<b>Target group of this document</b>	<b>2</b>	<b>Hydraulic element, left-hand</b>
<b>4</b>	<b>Symbols and signal words</b>	<b>2</b>	• 4311 241, 242, 243
<b>5</b>	<b>For your safety</b>	<b>2</b>	<b>Crossing for 3 elements</b>
<b>6</b>	<b>Application</b>	<b>2</b>	• 0432 300, 301, 302
<b>7</b>	<b>Installation</b>	<b>2</b>	<b>Crossing for 4 elements</b>
<b>8</b>	<b>Start up</b>	<b>2</b>	• 0432 400, 401, 402
<b>9</b>	<b>Maintenance</b>	<b>3</b>	
<b>10</b>	<b>Trouble shooting</b>	<b>5</b>	
<b>11</b>	<b>Technical characteristics</b>	<b>6</b>	
<b>12</b>	<b>Storage</b>	<b>6</b>	
<b>13</b>	<b>Disposal</b>	<b>7</b>	
<b>14</b>	<b>Declaration of manufacture</b>	<b>7</b>	

### 3 Target group of this document

- Specialists, fitters and set-up men of machines and installations with hydraulic expert knowledge.

#### Qualification of the personnel

**Expert knowledge** means that the personnel must

- be in the position to read and completely understand technical specifications such as circuit diagrams and product-specific drawing documents,
- have expert knowledge (electric, hydraulic, pneumatic knowledge, etc.) of function and design of the corresponding components.

An **expert** is somebody who has due to its professional education and experiences sufficient knowledge and is familiar with the relevant regulations so that he

- can judge the entrusted works,
- can recognize the possible dangers,
- can take the required measures to eliminate dangers,
- knows the acknowledged standards, rules and guidelines of the technology.

- has the required knowledge for repair and mounting.

### 4 Symbols and signal words

#### **WARNING**

##### Person damage

Stands for a possibly dangerous situation.

If it is not avoided, death or very severe injuries will result.

#### **CAUTION**

##### Easy injuries / property damage

Stands for a possibly dangerous situation.

If it is not avoided, minor injuries or material damages will result.

##### Hazardous to the environment

The symbol stands for important information for the proper handling with materials that are hazardous to the environment.

Ignoring these notes can lead to heavy damages to the environment.

#### **Note**

This symbol stands for tips for users or especially useful information. This is no signal word for a dangerous or harmful situation.

### 5 For your safety

#### 5.1 Basic information

The operating instructions serve for information and avoidance of dangers when installing the products into the machine as well as information and references for transport, storage and maintenance.

Only in strict compliance with these operating instructions, accidents and property damages can be avoided as well as trouble-free operation of the products can be guaranteed.

Furthermore, the consideration of the operating instructions will:

- avoid injuries
- reduce down times and repair costs,
- increase the service life of the products.

#### 5.2 Safety instructions

The product was manufactured in accordance with the generally accepted rules of the technology.

Observe the safety instructions and the operating instructions given in this manual, in order to avoid personal damage or material damage.

- Read these operating instructions thoroughly and completely, before you work with the product.
- Keep these operating instructions so that they are accessible to all users at any time.
- Pay attention to the current safety regulations, regulations for accident prevention and environmental protection of the country in which the product will be used.
- Use the ROEMHELD product only in perfect technical condition.
- Observe all notes on the product.
- Use only accessories and spare parts approved by the manufacturer in order to exclude danger to persons because of not suited spare parts.
- Respect the intended use.

- You only may start up the product, when it has been found that the incomplete machine or machine, in which the product shall be mounted, corresponds to the country-specific provisions, safety regulations and standards.
- Perform a risk analysis for the incomplete machine, or the machine.

Due to the interactions between the product and the machine/fixture or the environment, risks may arise that only can be determined and minimized by the user, e.g. :

- generated forces,
- generated movements,
- Influence of hydraulic and electrical control,
- etc.

### 6 Application

#### 6.1 Intended use

The products are used in industrial applications to transform hydraulic pressure to a radial movement and /or force. They must only be operated with hydraulic oil.

Furthermore the following belongs to possible uses:

- Use within the capacity indicated in the technical characteristics.
- Use as per operating instructions.
- Compliance with service intervals.
- Qualified and trained personnel for the corresponding activities.
- Mounting of spare parts only with the same specifications as the original part.

## 6.2 Misapplication

### ⚠️ WARNING

#### Injuries, material damages or malfunctions!

- Do not modify the product!

The use of these products is not admitted:

- For domestic use.
- On pallets or machine tool tables in primary shaping and metal forming machine tools.
- If due to physical / chemical effects (vibrations, welding currents or others) damages of the products or seals can be caused.
- In machines, on pallets or machine tool tables that are used to change the characteristics of the material (magnetise, radiation, photochemical procedures, etc.).
- In areas for which special guidelines apply, especially installations and machines:
  - For the use on fun fairs and in leisure parks.
  - In food processing or in areas with special hygiene regulations.
  - For military purposes.
  - In mines.
  - In explosive and aggressive environments (e.g. ATEX).
  - In medical engineering.
  - In the aerospace industry.
  - For passenger transport.
- For other operating and environmental conditions e.g.:
  - Higher operating pressures than indicated on the data sheet or installation drawing.
  - With hydraulic fluids that do not correspond to the specifications.
  - Higher flow rates than indicated on the data sheet or installation drawing.

Special solutions are available on request!

## 7 Installation

### 7.1 Connection of the hydraulic equipment

- Connect hydraulic lines to qualifying standards and pay attention to scrupulous cleanliness!

### ℹ️ NOTE

#### More details

- See ROEMHELD data sheets A 0.100, F 9.300, F 9.310 and F 9.360.

#### Screwed Plug

- Use only fittings "screwed plug B and E" as per DIN 3852 (ISO 1179).

#### hydraulic connection

- Do not use sealing tape, copper rings or coned fittings.

#### Pressure fluids

- Use hydraulic oil as per ROEMHELD data sheet A 0.100.

## 7.2 Design

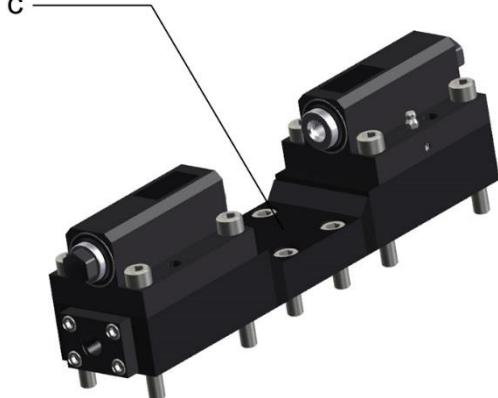


Figure 1: Design exterior clamping



Figure 2: Design crossing for 3 elements exterior clamping

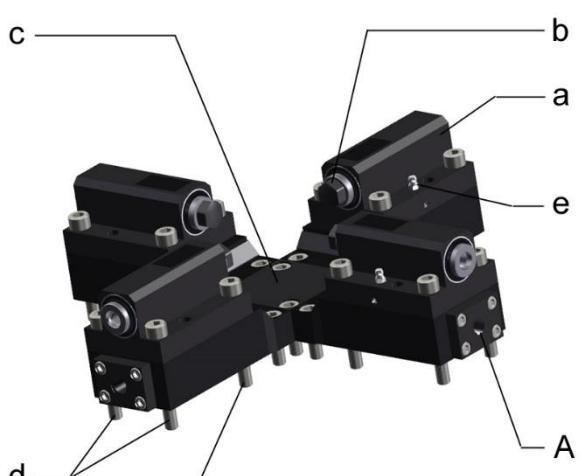


Figure 3: Design crossing for 4 elements

a	Clamping element	d	Fixing screws
b	Contact bolt	e	Lubricating nipple
c	Connecting bar	A	Port A

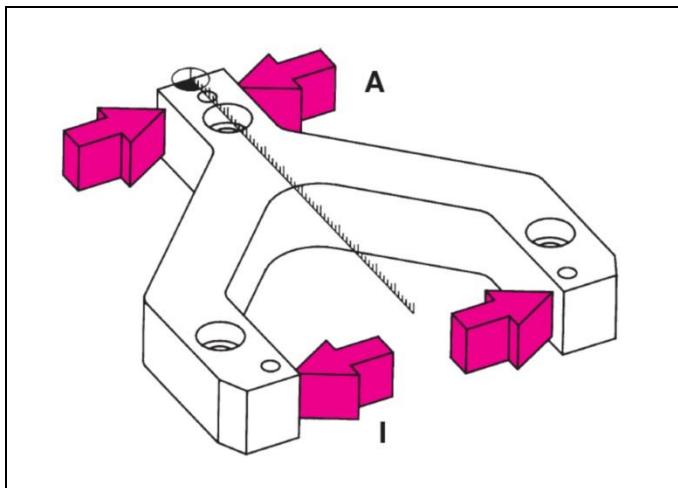


Figure 4: Clamping possibilities

A	Exterior clamping		I	Interior clamping
---	-------------------	--	---	-------------------

Concentric positioning and clamping elements can also be mechanically operated by means of a torque wrench (operating torque see data sheet H 4.300 chart page 3). The mechanical elements can be used for interior and exterior clamping. If the mechanical clamping elements are used for interior clamping, the clamping spindle and the return spring at the elements have to be exchanged.

### 7.3 Admissible oil flow rate

#### ⚠️ WARNING

##### Injury due to overload of the element

##### High-pressure injection (squirting out of hydraulic oil under high pressure) or flying components!

- Due to throttling or closing of ports a pressure intensification can occur.
- Connect the ports professionally!

#### ⚠️ CAUTION

##### Maximum flow rates do not exceed

The maximum flow rate must not be exceeded.

#### 7.3.1 Calculation of the admissible flow rate

##### Admissible flow rate

The admissible flow rate or the admissible stroke speed is valid for vertical mounting positions in combination with standard add-on parts as clamping arms or contact bolts, etc.

In case of other mounting positions and/or add-on parts the flow rate has to be reduced.

If the pump flow rate divided by the number of elements is larger than the admissible flow rate of one element, the flow rate has to be throttled.

This prevents an overload and therewith an early failure.

The flow rate can be checked as follows:

$$Q_P \leq 0,06 \cdot V_z \cdot n \quad \text{and/or} \quad Q_P \leq 6 \cdot v_z \cdot A_K \cdot n$$

for clamping elements and work supports (indicated on the data sheets)

#### Maximum piston speed

At specified pump flow rate  $Q_P$  and with the effective piston area  $A_K$  the piston speed can be calculated as follows:

$$v_m < \frac{Q_P}{6 \cdot A_K \cdot n}$$

#### Legend

- $V_z$  = Admissible flow rate of the element in  $[\text{cm}^3/\text{s}]$
- $Q_P$  = Flow rate of the pump in  $[\text{l}/\text{min}]$
- $A_K$  = Piston area in  $[\text{cm}^2]$
- $n$  = Number of elements, same dimensions

$$v_z = v_m = \text{Admissible/maximum stroke speed in } [\text{m}/\text{s}]$$

#### 💡 NOTE

##### Flow rate

- The maximum oil volume and/or the maximum stroke speed depend on the corresponding product.
  - For clamping cylinders see data sheet A 0.100.
  - For clamping elements, work supports, hydraulic valves, power units and other hydraulic elements indicated on the corresponding data sheets.

Further "things worth knowing about hydraulic cylinders, basics, detailed knowledge and calculations on hydraulic cylinders" see Technical information on the internet!

#### 7.3.2 Throttling of the flow rate

The throttling always has to be effected in the supply line to the element. Only thus pressure intensification and thereby pressures exceeding the operating pressure are avoided. The hydraulic circuit diagram shows flow control valves which allow oil return from the element without any impediments.

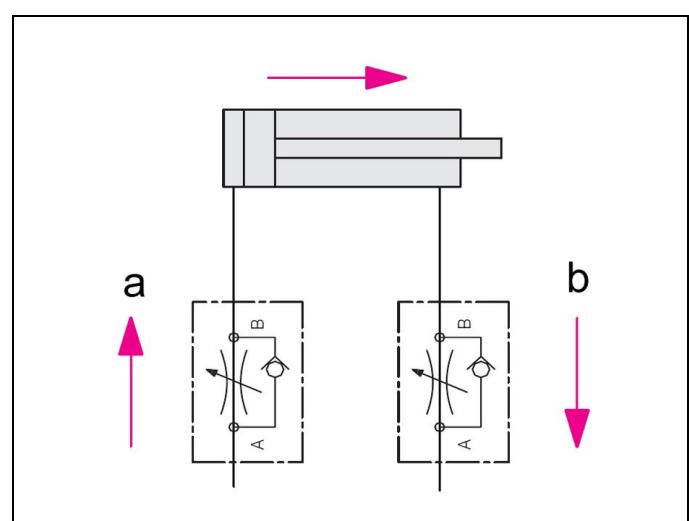


Figure 5: Hydraulic circuit diagram without flow control valves

a	Throttling direction	b	Free flow
---	----------------------	---	-----------

If a return-flow throttling is required due to a negative load, it must be guaranteed that the max. operating pressure (see technical characteristics) will not be exceeded.

## 7.4 Installation of pipe-mounted types

1. Clean the support surfaces.
2. Fix the element at the support surface.

### ⚠️ WARNING

#### Injury by falling products!

Safety shoes have to be worn to avoid injuries due to falling objects.

### ℹ️ Note

To determine the tightening torque of the fixing screws a screw calculation as per VDI 2230 page 1 has to be effected. The screw material is indicated in the chapter "Technical characteristics".

### ℹ️ NOTE

#### Tightening torques

- The tightening torques for the fixing screws have to be designed with reference to the application (e. g. as per VDI 2230).

Proposals and approximate values for the tightening torques see chapter "Technical characteristics".

## 7.5 Connection of the hydraulic equipment

1. Connect hydraulic lines to qualifying standards and pay attention to scrupulous cleanliness!

### ℹ️ NOTE

#### More details

- See ROEMHELD data sheets A 0.100, F 9.300, F 9.310 and F 9.360.

#### Screwed Plug

- Use only fittings "screwed plug B and E" as per DIN 3852 (ISO 1179).

#### hydraulic connection

- Do not use sealing tape, copper rings or coned fittings.

#### Pressure fluids

- Use hydraulic oil as per ROEMHELD data sheet A 0.100.

## 7.6 Determine the work piece zero point

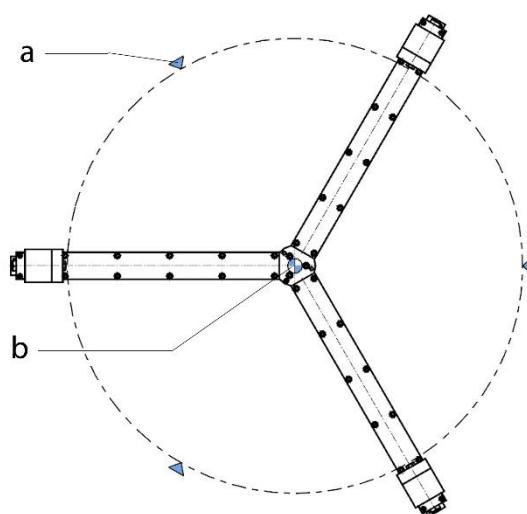


Figure 6: Centralising Unit with Workpiece

a Workpiece measuring point (3x)

b Workpiece position in the machine

1. mounting the centralising unit of the fixture plate,
2. have the main position of the unit,
3. if the fixture is on the machine, measuring the position with workpieces and moving the zero point in the machine control
4. have the exactly central point and a clamping repetitive accuracy of +/- 0,005 mm.

## 8 Start up

### ⚠️ WARNING

#### Poisoning due to contact with hydraulic oil!

Wear, damage of the seals, ageing and incorrect mounting of the seal kit by the operator can lead to escapes of oil.

Incorrect connection can lead to escapes of oil at the ports.

- For handling with hydraulic oil consider the material safety data sheet.
- Wear protection equipment.

#### Injury by crushing!

Components of the product make a movement while they are in operation.

- This can cause injuries.
- Keep parts of the body and items out of the working area!

#### Injury by crushing!

- Due to the stored energy, an unexpected start of the product can occur.
- Maintenance works at the product must only be made in de-pressurised mode!
- Keep hands and other parts of the body out of the working area!

**⚠ CAUTION**
**Operating pressure of 500 bar does not exceed**

The maximum operating pressure of 500 bar must not be exceeded.

**Operating pressure should not exceed**

The max. operating pressure must not be exceeded (see technical characteristics).

1. Check tight seat.
2. Check tight seat of the hydraulic ports (check tightening torque of the hydraulic ports).
3. Bleed the hydraulic system.

**ℹ NOTE**
**Clamping time**

- Without bleeding the clamping time will be considerably prolonged and function problems may occur.

**8.1 Bleeding of pipe-mounted types**

1. Loosen carefully at low pressure union nut of the pipe at the hydraulic ports.
2. Pump until bubble free oil comes out.
3. Fasten union nuts of the pipe.
4. Check tightness.

**9 Maintenance**
**⚠ WARNING**
**Burning due to hot surface!**

- In operating conditions, surface temperatures of more than 70 °C can appear at the product.
- All maintenance and repair works must only be effected in cooled mode or with safety gloves.

**Injury by crushing!**

- Due to the stored energy, an unexpected start of the product can occur.
- Maintenance works at the product must only be made in de-pressurised mode!
- Keep hands and other parts of the body out of the working area!

**9.1 Plan for maintenance**

Maintenance works	Interval	Realisation
Cleaning	As required With increased dirt and coolant ingress more frequently!	Operator
Regular checks	daily	Operator
Check the grease filling once a year	Remove the centering cover. If required, refill grease ALTEMP QNB50	<b>⚠ Attention!</b> The hollow space must only be filled with grease by 20%.
Repair		Qualified personnel

\* Brand name

Description as per DIN 51 502: KPHC 2 N-40.

Description as per ISO 6743-9: ISO-L-X-DDHB 2

**9.2 Cleaning**
**⚠ CAUTION**
**Avoid damages of the moved components**

Avoid damages of the moved components (rods, plungers, bolts, etc.) as well as of wiper and seal.

**Aggressive cleaning agents**

The product must not be cleaned with:

- Corrosive or corroding components or
- Organic solvents as halogen or aromatic hydrocarbons and ketones (cellulose thinner, acetone, etc.), because this can destroy the seals.

The element must be cleaned at regular intervals. Especially the clamping slide and the housing have to be cleaned of swarf and other liquids.

In the case of heavy contamination, the cleaning has to be made in shorter intervals.

**9.3 Regular checks**

1. Check tightness of hydraulic connections (visual control).
2. Leakage control at the housing and the clamping slide.
3. Clamping force control by pressure control.
4. Check the observance of the maintenance intervals.

**9.4 Exchange seal kit**

The exchange of the seal kit is made in case of external leakages. For high availability, the seals have to be changed at the latest after 1,000,000 cycles or 2 years.

The seal kit is available as spare part. An instruction for the exchange of the seal kit is available on request.

**ℹ NOTE**
**Seal Kits**

- Do not install seal kits which were exposed to light for a longer time.
- Pay attention to the storage conditions (see chapter "Technical characteristics").
- Only use original seals.

**10 Trouble shooting**

Trouble	Cause	Remedy
Clamping unit does not clamp:	Hydraulic oil supply or return is impeded	Check and blow through tubes.
	Collet not sufficiently screwed in into the clamping unit.	Completely screwed in, check tight seat
System pressure drops:	Hydraulic ports leaky	seal
	Wear of the seals	Replace sealing rings.
Clamping unit does not un-clamp:	Backing-up pressure in the return line too high	Eliminate backing-up pressure
	Return spring broken	Repair required
	Body corroded in the inside	Exchange clamping unit

## 11 Technical characteristics

### General characteristics

Type	Clamping force per pair of elements [kN]	at max. operating pressure [bar]
4311-221	5	500
4311-241		
4311-222	12	500
4311-242		
4311-223	20	500
4311-243		

### Weights

Types	Clamping stroke [mm]	Weight [kg]
4311-221	6	<b>2,2</b>
4311-241		
4311-222	8	<b>4,5</b>
4311-242		
4311-223	8	<b>9</b>
4311-243		

**Proposal, tightening torques for screws of tensile strength 8.8, 10.9, 12.9**

### NOTE

The indicated values are approximate values and have to be interpreted according to the user's application!

See note!

Thread	Tightening torque [Nm]		
	<b>8.8</b>	<b>10.9</b>	<b>12.9</b>
M3	1,3	1,8	2,1
M4	2,9	4,1	4,9
M5	6,0	8,5	10
M6	10	15	18
M8	25	36	45
M10	49	72	84
M12	85	125	145
M14	135	200	235
M16	210	310	365
M20	425	610	710
M24	730	1050	1220
M30	1,450	2100	2450

**Note:** Valid for workpieces and set screws made of steel with metric thread and connecting surface dimensions as per DIN 912, 931, 933, 934 / ISO 4762, 4014, 4017, 4032

In the table values for tightening torques the following is considered:

Design steel/steel, friction value  $\mu_{ges} = 0.14$  - not oiled, utilisation of the minimum yield point = 90%.

### NOTE

#### Further information

- For further technical data see ROEMHELD data sheet H4300

## 12 Storage

### ⚠ CAUTION

#### Storage of components!

- The product may not be exposed to direct solar radiation, because the UV light can destroy the seals.
- A storage differing from the storage conditions is inadmissible.
- In case of improper storage, the seals can embrittle and resinification of the anti-corrosive oil or corrosion at the element can occur.

The elements are tested by default with mineral oil. The exterior of the elements is treated with a corrosion inhibitor.

The oil film remaining after the test provides for a six-month interior corrosion protection, if stored in dry and uniformly tempered rooms.

For longer storage times, the element has to be filled with a non-resinifying corrosion inhibitor and the outside surfaces must be treated.

## 13 Disposal

#### Hazardous to the environment

 Due to possible environmental pollution, the individual components must be disposed only by an authorised expert company.

The individual materials have to be disposed as per the existing regulations and directives as well as the environmental conditions.

Special attention has to be drawn to the disposal of components with residual portions of hydraulic fluids. The instructions for the disposal at the material safety data sheet have to be considered.

For the disposal of electrical and electronic components (e.g. stroke measuring systems, proximity switches, etc.) country-specific legal regulations and specifications have to be kept.

## 14 Declaration of manufacture

#### Manufacturer

Römhild GmbH Friedrichshütte  
 Römhildstraße 1-5  
 35321 Laubach, Germany  
 Tel.: +49 (0) 64 05 / 89-0  
 Fax: +49 (0) 64 05 / 89-211  
 E-mail: info@roemheld.de  
 www.roemheld.com

#### Declaration of manufacture of the products

They are designed and manufactured in line with the relevant versions of the directives **2006/42/EC** (EC MSRL) and in compliance with the valid technical rules and standards.

In accordance with EC-MSRL, these products are components, that are not yet ready for use and are exclusively designed for the installation in a machine, a fixture or a plant.

According to the pressure equipment directives the products are not to be classified as pressure reservoirs but as hydraulic placing devices, since pressure is not the essential factor for the design, but the strength, the inherent stability and solidity with regard to static or dynamic operating stress.

The products may only be put into operation after it was assessed that the incomplete machine / machine, in which the product shall be installed, corresponds to the machinery directives (2006/42/EC).

---

The manufacturer commits to transmit the special documents of the products to state authorities on request.  
The technical documentation as per appendix VII part B was prepared for the products.

Responsible person for the documentation:  
Dipl.-Ing. (FH) Jürgen Niesner, Tel.: +49(0)6405 89-0.

**Römheld GmbH**  
**Friedrichshütte**

Laubach, 10.01.2020