



HILMA. MCP

Jaw widths 60 mm, 100 mm, 125 mm, centric-hydraulic



Contents

1	Product description	1
2	Documentation applicability	1
3	Target group	1
4	Symbols and signal words	2
5	For your safety	2
6	Use	2
7	Assembly	3
8	Start-up	3
9	Operation	4
10	Maintenance	5
11	Troubleshooting	6
12	Technical data	6
13	Disposal	7
14	Installation statement	7

1 Product description

Description

The products are designed for multi-purpose workpiece clamping on machine tools.

The hydraulic power stroke is generated by an external pressure transducer (e.g. Roemheld modular unit). The clamping system is hydraulically double-acting.

Application

The products are used for processing dimensionally stable workpieces in single or multiple clamping systems.

The products are suitable both for series production and individual production.

2 Documentation applicability

This documentation is applicable to the following products:
Products of catalogue sheet WM-021-005-xx-xx. These cover the types and/or order numbers:

- 9.4583.0401
- 9.4585.0401
- 9.4586.0401

3 Target group

Specialist staff, fitters and set-up staff of machines and systems with expert knowledge of hydro-mechanical equipment.

Staff qualification

Expert knowledge means, that staff must:

- be capable to read and completely understand technical specifications such as circuit diagrams and product-specific drawings;
- have expert knowledge of the function and construction of the relevant components.

An **expert** is a person who has sufficient knowledge based on professional training and experience and who is familiar with the relevant standards and regulations, so that he/she:

- may assess the work assigned to him/her;
- is able to identify potential risks;
- is able to take appropriate measures to eliminate risks;
- is aware of the approved technical standards, codes and regulations;
- has the required knowledge for repair and installation.

4 Symbols and signal words

⚠ WARNING

Personal injury

Identifies a potentially hazardous situation.

If not avoided, death or serious injuries may be the consequence.

⚠ CAUTION

Light injuries / damage to property

Identifies a potentially hazardous situation.

If not avoided, light injuries or damage to property may be the consequence.

Hazardous to the environment



This symbol identifies important information for the proper handling of substances which are hazardous to the environment.

Non-compliance with the related instructions may result in serious environmental damage.

Mandatory action symbol!



This symbol identifies important information of required protection equipment, etc.

ℹ NOTE

- This symbol identifies tips for application or particularly useful information. It is not a signal work for dangerous or hazardous situations.

5 For your safety

5.1 General information

This Operation Manual is intended to provide information on and avoidance of risks related to the installation of the products into the machine, as well as information and notes on transport, storage and maintenance.

Accidents and damage to property can only be avoided and the trouble-free operation of the products can only be guaranteed if this Operation Manual is strictly observed.

In addition, compliance with this Operation Manual will help to:

- avoid injuries;
- reduce downtimes and repair cost;
- increase the products' lifetime.

5.2 Safety instructions

The product was manufactured in accordance with the generally recognized codes of practice.

Please observe the safety instructions and procedural descriptions in this Operation Manual in order to avoid personal injuries or damage to property.

- Please read this Operation Manual carefully and completely before working with the product.
- Please keep this Operation Manual where it is accessible to all product users at any time.
- Please observe the applicable safety instructions as well as instructions for the prevention of accidents and for environmental protection in the country where the product is used.
- Please only use this Roemheld product in a technically safe and perfect condition.
- Please observe all instructions on the product.

- Please only use accessories and spare parts approved by the manufacturer in order to exclude personal risks due to unsuitable spare parts.
- Please only use the product in accordance with its intended purpose.
- You may only start operation with the product if it has been determined that the incomplete machine and/or the machine in which the product is to be installed complies with the country-specific regulations, safety instructions and standards.
- Please perform a risk analysis for the incomplete machine and/or machine. Interactions between the product and the machine/system and its environment may result in risks, which may only be identified and minimized by the user, e.g.:
 - forces generated;
 - movements initiated;
 - influence of hydraulic and electrical controls;
 - etc.
- Use of personal protection equipment is to be considered for all work steps.

6 Use

6.1 Use in compliance with intended purpose

The products are exclusively designed for clamping workpieces in industrial applications.

In addition, use in compliance with the intended purpose includes:

- Use within the capacity limits specified in the technical data (see catalogue sheet).
- Use as described in this Operation Manual.
- Compliance with maintenance intervals.
- Assignment of staff qualified or trained in the relevant activities.
- Installation of spare parts with the same specifications as the original parts only.
- Only clamping jaws may be moved.

6.2 Improper use

⚠ WARNING

Injuries, damage to property or malfunction!

- Do not modify the product!

Use of products is impermissible:

- for domestic applications.
- on pallets or tool tables in prototype or forming machines.
- if the products or gaskets might be damaged by physical/chemical effects (vibrations, welding currents or others).
- in machines, pallets or tool tables used for modifying the material properties (magnetizing, radiation, photochemical processes, etc.).
- in areas subject to special regulations, in particular as regards systems and machines:
 - for use on funfairs and in amusement parks.
 - for use in food processing or in areas subject special hygienic regulations.
 - for military purposes.
 - in mines.
 - in explosive and aggressive environments (e.g. ATEX).
 - in medical engineering.
 - in aerospace engineering.
 - for passenger transportation.

- if deviating operating and environmental conditions apply, e.g.:
 - if operating pressures exceed those indicated in the catalogue sheet and/or the installation drawing.
 - if pressure liquids not complying with the specified ones are used.
 - if volume flows exceed those indicated in the catalogue sheet and/or the installation drawing.

Special solution models are available upon request!

7 Assembly

⚠ WARNING

Injuries by parts falling off!

- Keep hands and other parts of the body remote of the working area.
- Wear personal protection equipment!

⚠ CAUTION

Heavy weigh may drop

- Some product types have a significant weight. These products have to be secured against dropping during transport.
- Weight data are included in the "Technical data" section.

ℹ NOTE

Aggressive media

If there is a possibility that aggressive cutting and cooling liquids including chippings may ingress the inside of the clamping slide, the clamping slide inside must be cleaned by the customer.

Ease of movement

Please make sure that the product moves easily upon installation!

7.1 Design

The hydraulic-centrical force is transferred onto the jaws via the slides.

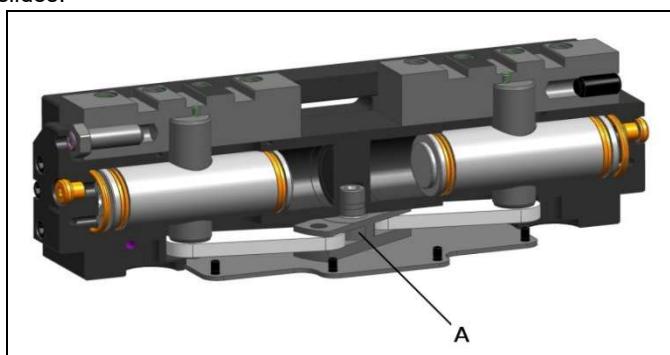


Fig. 1: Construction - synchronization device (A)

- The hydraulic clamping and unclamping process is performed by an external pressure transducer with a double-acting circuit.
- The low-backlash synchronization device will ensure high centring accuracy.

7.2 Types of installation

⚠ WARNING

Risk of injuries due to improper product fixing!

If the product is fixed improperly, it may loosen from the machine bench or be damaged during clamping or processing.

- Install the product as instructed in the present Operation Manual.
- Ensure that the installation surface of the product base and the machine bench are clean before installation.
- The installation surface of the product base must be even and have a minimum overlap of 75 % on the machine bench.
- Install the product in accordance with the torque specified in the Operation Manual.
- Fix the product so that it may not be displaced by the processing forces.

Types of installation

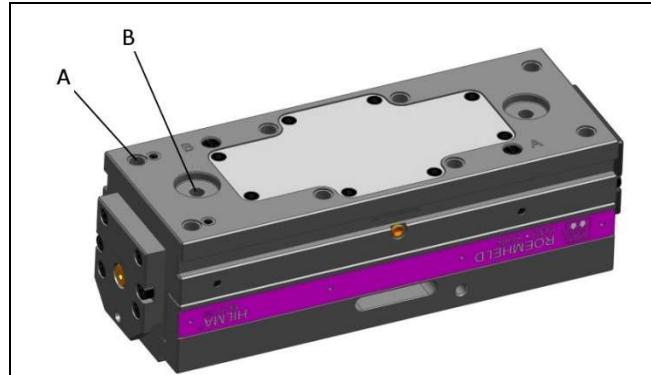


Fig. 2: Types of installation

A Tapped bore

B Dowel hole

Fastening on the machine table:

- Unevenness and chips between the contact surface and the base surface shall be removed.
- Alignment
 - with a load cell,
 - with dowel holes in the base.
- Fixing
 - with bolts,
 - with clamping claws.

Special fixing kits may be ordered for each series.

8 Start-up

ℹ NOTE

Lubrication before start-up

The elements are delivered with a minimum lubrication.

The sliding surfaces have to be lubricated lightly with track oil, ISO VG 220, before start-up!

- Check tight seat (check tightening torques of fixing screws).

NOTE
Product operation on grinding machines forbidden!

Due to product operations on grinding machines and thereby increased dirtying, movable product parts will be damaged.

- Do not use the product on grinding machines.

WARNING
Risk of injuries or damage to property by collision with system components!

In the range of motion of the system components, persons may be injured by collision with system components, or damage to property may be caused by collision with other system components.

- Check the range of motion of the system components before start-up.

9 Operation

WARNING
Vibration will loosen the product fixture!

Vibration affects the workpiece fixture and results in an improperly fixed workpiece. An improperly fixed workpiece may be catapulted off the product during processing and result in personal injuries or damage to property.

- Exclude vibration on the product if possible.

Risk of burns caused by hot workpieces!

Hot workpieces may cause burns on parts of the body.

- Wear heat-resistant protective clothing.

Bruises, burns and bone fractures caused by dropping workpieces!

Workpieces may cause injuries when dropping.

- Wear safety shoes with safety level 1 (S1) as a minimum requirement.

Risk of injuries by high-pressure injection in case of improper handling!

Improper handling of the hydraulic system may result in the ejection of liquids under high pressure from the hydraulic system and cause injuries to persons.

- Work on hydraulic systems may only be performed by qualified staff with special knowledge in the field.

Risk of injuries during workpiece clamping!

The workpiece properties may induce personal injuries during clamping if the workpiece is not clamped properly.

- Remove contamination on the clamping surfaces before clamping.
- Observe material properties of the workpiece during clamping.
- Observe workpiece shape during clamping.
- Observe workpiece clamping surface during clamping.
- Observe workpiece inertia during clamping.

CAUTION
Risk of injuries by crushing of extremities during clamping

The product is to be used in a manner so that the operator's own or other persons' extremities may not be squeezed during clamping.

- Keep your own or other persons' extremities off the clamping area during clamping.

Risk of injuries due to exertion during clamping and unclamping of the product

When unclamping the product, high forces have to be overcome initially. Persons may slip off the product during unclamping and be injured.

- Be careful and proceed slowly when unclamping the product.

9.1 Pressure oil connection and bleed

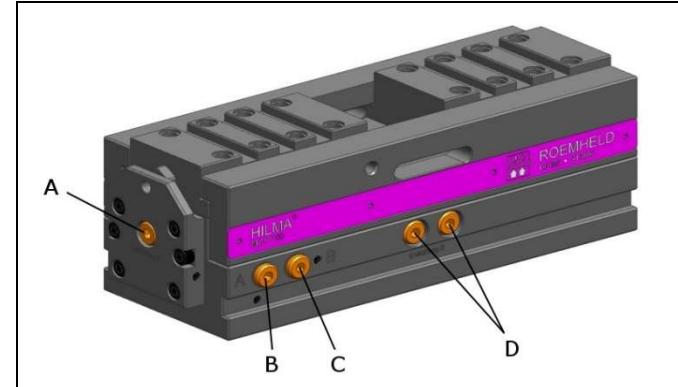


Fig. 3: Pressure oil connection and bleed

A "Hydraulic clamping" bleed	C Pressure oil connection "Unclamping"
B Pressure oil connection "Clamping"	D Bleeding "Hydraulic un-clamping"

Recommended oil type: HLP 32 or HLP 46 pursuant to DIN 51524.

9.2 Check of clamping range

WARNING
Risk of injuries by incorrect utilization of stroke!

If you utilize the entire stroke as insertion range, the workpiece cannot be clamped safely. The workpiece may be torn from the product during processing, and cause personal injuries and damage to the machine.

- Make sure that the jaws close by 2 mm more with non-inserted workpiece than with an inserted workpiece.

1. Remove workpiece from the centring vice and completely close the centring vice.
2. Make sure that the jaws close by 2 mm more with non-inserted workpiece than with an inserted workpiece.

9.3 Clamping and releasing

⚠ WARNING

Risk of injuries due to flexible or insufficiently clamped workpieces!

Flexible or insufficiently clamped workpieces may be catapulted off the machine or drop and cause personal injuries during processing.

- Only use the product for clamping rigid workpieces.
- Sufficiently clamp the workpiece before processing.

Risk of injuries due to insufficient clamping force or insufficient workpiece clamping!

Insufficient clamping force or insufficiently clamped workpieces may be catapulted off the machine or drop and cause personal injuries during processing.

- Have the product checked for its operational reliability by a qualified expert after extended downtimes, repair work, and at regular intervals.
- Have the product checked for its defined clamping force by a qualified expert.
- Have the product checked for visual damage or wear by a qualified expert.
- Check whether the product is fixed properly before product start-up.
- Check whether the workpiece is clamped properly before product start-up.

1. Perform clamping and unclamping process with double action via selection switch; clamp or unclamp via 2-hand safety switch or signal control in fully automatic operation, as required. Observe maximum values, in particular the maximum unclamping pressure (see Section 12 "Technical Data").
The workpiece is clamped or unclamped proportionately to the set pressure.
2. Limit the unclamping stroke by the threaded pin.
3. Lock the threaded pin against twisting using the counter nut.

9.4 Limitation of unclamping stroke

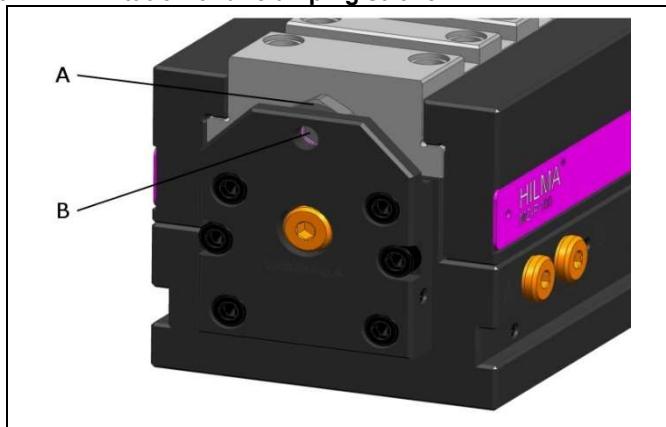


Fig. 4: Limitation of unclamping stroke

A Counter nut

B Threaded pin

10 Maintenance

⚠ WARNING

Burns on hot surfaces!

- In operation, surface temperatures of over 70°C may develop on the product.
- Maintenance and repair work should only be performed in a cooled down condition and/or with protective gloves.

Risk of injuries by breaking product parts!

During operation, product parts may break, and this may cause personal injuries.

- Observe maintenance intervals for all parts pursuant to this Operation Manual.

10.1 Maintenance schedule

Maintenance work	Interval	Performance
Cleaning	As required	Operator
Regular checks	Daily	Operator
Regular lubrication	At least once a month, after 500 clamping cycles at the latest!	Operator ⚠ Caution! If this lubrication is omitted, the tensioner may fail!
Repair	As required	Expert staff

10.2 Cleaning

⚠ CAUTION

Damage to moving components!

Avoid damage to movable components (slide).

Aggressive cleaning agents

The product must not be cleaned:

- with corrosive or caustic substances or
- with organic solvents such as halogenated or aromatic hydrocarbons and ketones (cellulose thinner, acetone, etc.).

The clamping element should be subjected to basic cleaning according to the type of use. Maintenance and care are limited to surfaces and/or components accessible from the outside. In particular, the running surfaces of the slide guide should be checked for damage and lubricated.

We recommend the following lubricants:

- Track oil Vg 68
- BP Maccurat D 68
- Mobil Vactra Oil No. 2

In case of heavy contamination, cleaning intervals have to be shortened.

10.3 Regular checks

1. Check clamping force regularly using a force measuring gauge.
2. Observe maintenance intervals.

10.4 Regular center bearing lubrication

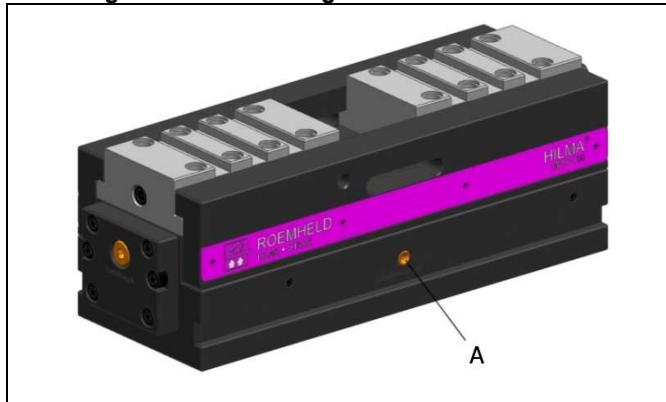


Fig. 5: Center bearing lubrication via lubricating nipples (A)

The following maintenance and care work is to be performed as required, however once a month, each:

1. Lubricate the center bearing with track oil using an oil gun on the lubricating nipple.
2. Lubricate guide runways with track oil.

10.5 Service / maintenance service

1. Austria and Germany

Maintenance by manufacturer

Please send the clamping system with STARK return note carriage free.

Stark Spannsysteme GmbH
Römergrund 14
6830 Rankweil, Austria
Service-Telefon: +43 5522 / 37400-0
E-Mail: inf@stark-roemheld.com

Maintenance at customer workshop:
Please call maintenance service

Service-Telefon: +49 6405 / 89-400
E-Mail: service@roemheld.de

2. Third country

Please contact the HILMA-RÖMHELD general importer or your local dealer.

11 Troubleshooting

Error	Cause	Remedy
Workpiece is not clamped or not clamped sufficiently	Move slide to machine.	Check clamping range (see Sec. 9.1).
	Workpiece gives way.	Support workpiece.
	Operation pressure too low.	Set higher operation pressure at pressure transducer.
Workpiece is not clamped centrally.	Jaws are not set symmetrically.	Replace and/or rework claw set.


Slide does not open continuously. Pump shuts off repeatedly.	Overload / wear. Excessive flow resistance when opening.	Maintenance by manufacturer. Increase pipe cross-sections. Provide pressure switch with timer.
---	---	--

12 Technical data


Parameters

Type 4580-0401			
Jaw width [mm]	60	100	125
Max. clamping force [kN]	10	20	35
Clamping operating pressure [bar]	320	270	270
Unclamping operating pressure [bar]	50	50	50
Clamping stroke [mm]	30	50	100
Base length [mm]	170	266	465
Mass [kg]	5.4	17.4	50.5

Clamping force progression MC-P 60 hydr.

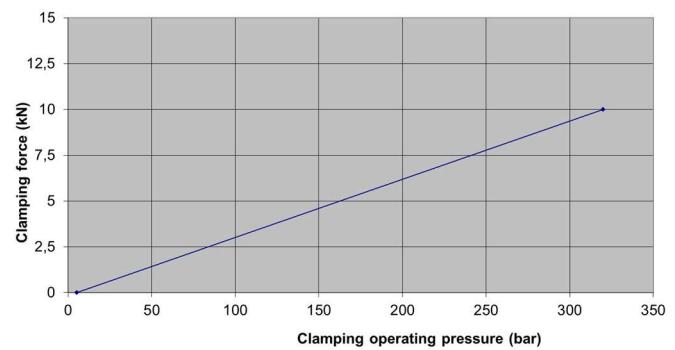

Clamping force progression MC-P 100/125 hydr.

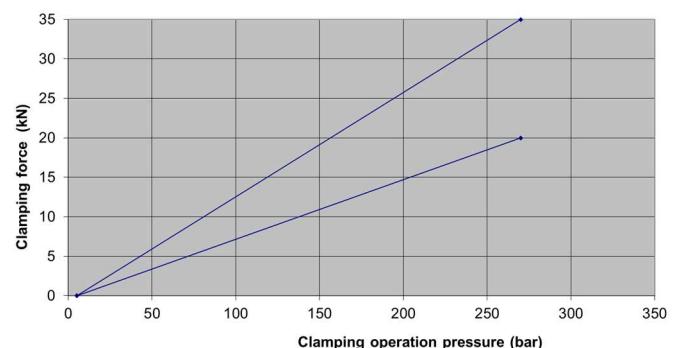

NOTE

Other data

- For more technical data, please refer to the catalogue sheet.

Proposal, tightening torques for screws of strength classes 8.8; 10.9; 12.9

NOTE

- The values indicated are to be considered as approximate values and to be interpreted by the user in each individual case!

See note!

Threads	Tightening torques (MA) [Nm]		
	8.8	10.9	12.9
M6	10	15	18
M8	25	36	45
M10	49	72	84
M12	85	125	145
M14	135	200	235
M16	210	310	365
M20	425	610	710

Note: Applicable to workpieces and shaft screws of steel with metric threads and head bearing dimensions as DIN 912, 931, 933, 934 / ISO 4762, 4014, 4017, 4032

The tightening torque (MA) values in the table take account of: Steel/steel design, friction value $\mu_{ges} = 0.14$ - not lubricated; utilization of minimum yield strength = 90%

12.1 Storage

CAUTION

Component storage!

- The product must not be exposed to direct sunlight, since UV light may cause serious damage to the gaskets.
- Storage not in compliance with the specified storage conditions is impermissible.
- Improper storage may result in the embrittlement of gaskets and in the resinification of the corrosion protection oil and/or in corrosion on the element.

ROEMHELD products are tested with mineral oil by default. Products are treated with corrosion inhibitor on the outside. The oil film remaining after the test ensures inside corrosion protection for six month if the product is stored in dry and evenly tempered rooms.

For extended storage periods, the product must be filled with a non-resinating corrosion inhibitor, and the outside surfaces have to be treated.

12.2 Accessories

NOTE

Accessories

- See catalogue sheet.

13 Disposal

Hazardous to the environment

In order to avoid potential environmental damage, the individual components have to be disposed of by approved expert companies.

All materials have to be disposed of in compliance with the applicable codes and regulations as well as environment protection regulations.

Particular importance is to be attached to the disposal of components containing residues of pressure liquids. The notes regarding disposal in the safety data sheet have to be observed. As regards the disposal of electrical and electronic components (e.g. position sensors, proximity switches, etc.), the country-specific statutory requirements and regulations have to be complied with.

14 Installation statement

Manufacturer

STARK SPANNSYSTEME GmbH

Römergrund 14

6830 Rankweil Austria

Tel.: +43 5522 37400-0

E-Mail: info@stark-roemheld.com

www.stark-roemheld.com

Products of catalogue sheet WM-021-005-xx-xx. These cover the types and/or order numbers:

- 9.4583.0401
- 9.4585.0401
- 9.4586.0401

They have been designed and manufactured pursuant to directive **2006/42/EG** (EG-MSRL) as revised as well as the applicable technical codes.

Pursuant to EG-MSRL, these products are components not ready for use and exclusively intended for installation into a machine, device or system.

Pursuant to the pressure equipment directive, the products are not classified as pressure vessels, but as hydraulic adjustment device, since the pressure is not the essential factor for the design, but strength, inherent stability and stability against static and dynamic operation loads.

The products may not be operated until it has been determined that the incomplete machine and/or the machine in which the product is to be installed complies with the machinery directive (2006/42/EG).

The manufacturer agrees to submit the product-specific documents to government agencies upon request.

The technical documentation for the products pursuant to Annex VII Part B has been prepared.

14.1 List of applicable standards

Product Safety Act [ProdSG]; November 2011

DIN EN ISO 12100, 2011-03, Safety of machinery; Basic terminology, general principles for design (supersedes Parts 1 and 2)

DIN EN ISO 13857; 2008-06, Safety of machinery - Safety distances to prevent hazard zones being reached by upper and lower limbs. (supersedes: DIN EN 294)

DIN EN 349, 2008-09, Safety of machinery; minimum distances to avoid crushing of parts of the human body

DIN EN 81714-2, 2007-08, Design of graphic symbols for use in technical product documentation

DIN EN ISO 4413, 2011-04, Pneumatic fluid power - General rules and safety requirements for hydraulic systems and their components

DIN EN 82079; 2010-10, Preparation of Instructions for Use - Structuring, Content and Presentation – Part 1

STARK SPANNSYSTEME GmbH

Martin Greif

Managing director



Rankweil, July 11, 2024









STARK Spannsysteme

Ein Unternehmen der ROEMHELD Gruppe

STARK Spannsysteme GmbH
Römergrund 14 | 6830 Rankweil
Austria

+43 5522 37 400-0
info@stark-roemheld.com

stark-roemheld.com